


SLEEP-EZZ

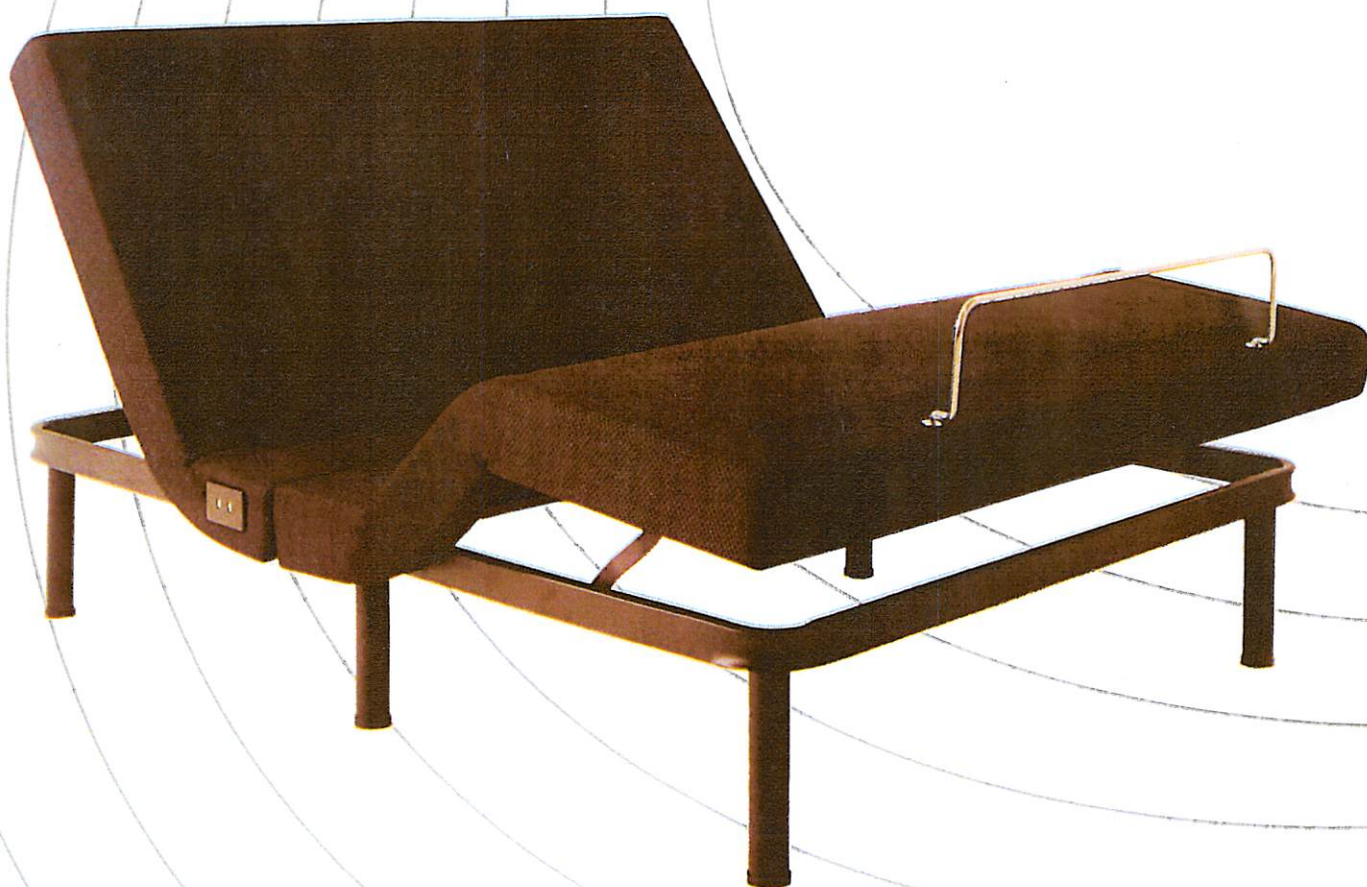

SE-450

Warnings and Safety Instructions

The main priority at Sleep-Ezz is making sure that all purchasers of our products enjoy them safely. We ask that everyone reads this manual carefully and with caution. Please observe all warnings and safety instructions. **FAILURE to adhere to any of the warnings or cautions listed in this manual could potentially void the warranty.** At the end of this manual, there will be contact information. Please email or call with questions or comments. Thank you for purchasing your adjustable bed frame from Sleep-Ezz.

Safety Precautions

Sleep-Ezz strongly encourages that you read the instructions completely before using this product. It is imperative that you perform correct assembly and operation of your adjustable bed to ensure ideal performance and longevity from your SE-450 adjustable bed frame. We ensure that this product has been thoroughly tested and inspected for safety and functionality prior to sale.

Radio Frequency of the Device is 2.4 GHZ.

FCC compliance device complies with part 15 of the FCC Rules under these two conditions:

1. This device does not cause any harmful interference.
2. This device will accept any interference received, including interference causing undesired effect on the operation.

SE-450

Should be published in the
Journal of the American
Medical Association
Vol. 100, No. 1, 1958
Page 100

a "hospital or medical" bed for commercial or residential use. Sleep-Ezz. has not designed this product to meet hospital or medical standards as defined by the US government.

In addition, do not attach Oxygen or additional medical equipment to this product due to the risk of explosion.

Do not use any flammable gases, liquids or materials near this product. This includes any medical equipment that is potentially flammable.

Pinch Hazard

Never place Hands, Feet or any body part near the bed frame itself while it is in motion to prevent all "pinching" injuries. In addition, never place any body part under this product while head and feet sections of the SE-450 Adjustable Bed are elevated. Any portion of the SE-450 Adjustable Bed Frame that rests on the inner frame has the potential to pinch or injure any body parts placed under or between sections of the bed frame. Also be cautious of areas where joints and hinges connect the various parts of this product because those areas could also cause pinching or injury if any body part is placed there while Sleep-Ezz Adjustable Bed Frame is in motion.

Electrical Safety

IMPORTANT NOTE: To ensure maximum safety, this product should be plugged into an electrical surge protector and

Weight Ratings and Restrictions

Overload of Weight: In the case of an overload of weight is placed on the foot or head mechanism, the power supply of the control unit will get overheated and shuts down functions. Immediately remove the excess weight, and all functions will resume after the temperature decreases.

Lifting and Lowering Cycles: Do not sit on the head or the foot of the bed while changing positions during the lifting or lowering cycles, and when in the raised position.

Children and Pets: It is imperative that no children or pets play on or around The SE-450 Adjustable Bed to prevent any injury. Do not allow small children to operate the adjustable bed under any circumstances. Any individual with diminished mental capacity should also not be allowed to operate this product for safety reasons.

ADDITIONAL WARNINGS:


- If the SE-450 Adjustable Bed Frame needed to be moved after assembly, be sure to move while product is in the flat position with at least 2 people supporting the weight of the product on both ends. Do not move this product in a vertical or upright position to prevent injury on the individuals or the product.

Unpacking the Parts Included




1. Open the carton box and unfold the metal bed frame.
2. Then open all the boxes containing all the parts and only cut zip ties for remote, power cord and mattress bar. **Do Not** cut the zip ties that tighten the USB Y cable, Massage Y cable and underbed LED light cable.
3. Please make sure you have all the parts of your adjustable bed.

- Legs and bolts: 2 pcs center legs, 4 pcs center leg bolts, 4 pcs corner legs, 4 pcs corner leg bolts
- 1 Allen key
- 4 pcs Motor pins, 4 pcs Motor clips
- Foot mattress retainer (2 guards for king size bed)
- Multi Height 3 Sections Legs Extensions 4"+ 2.5"+4"
- Control Box
- Power Cord
- Power Supply Adapter
- Underbed LED Light
- Remote Control
- Foot Masage Motor covered by a pad (motor is not visible)
- Head Masage Motor covered by a pad (motor is not visible)
- Head Motor
- Foot Motor
- Massage Motor Y Cable
- 2 Pairs of (4) USB Ports
- 2 AAA Batteries
- 2 9V Batteries(not included)
- Instruction Manual


SE-450 SYSTEM

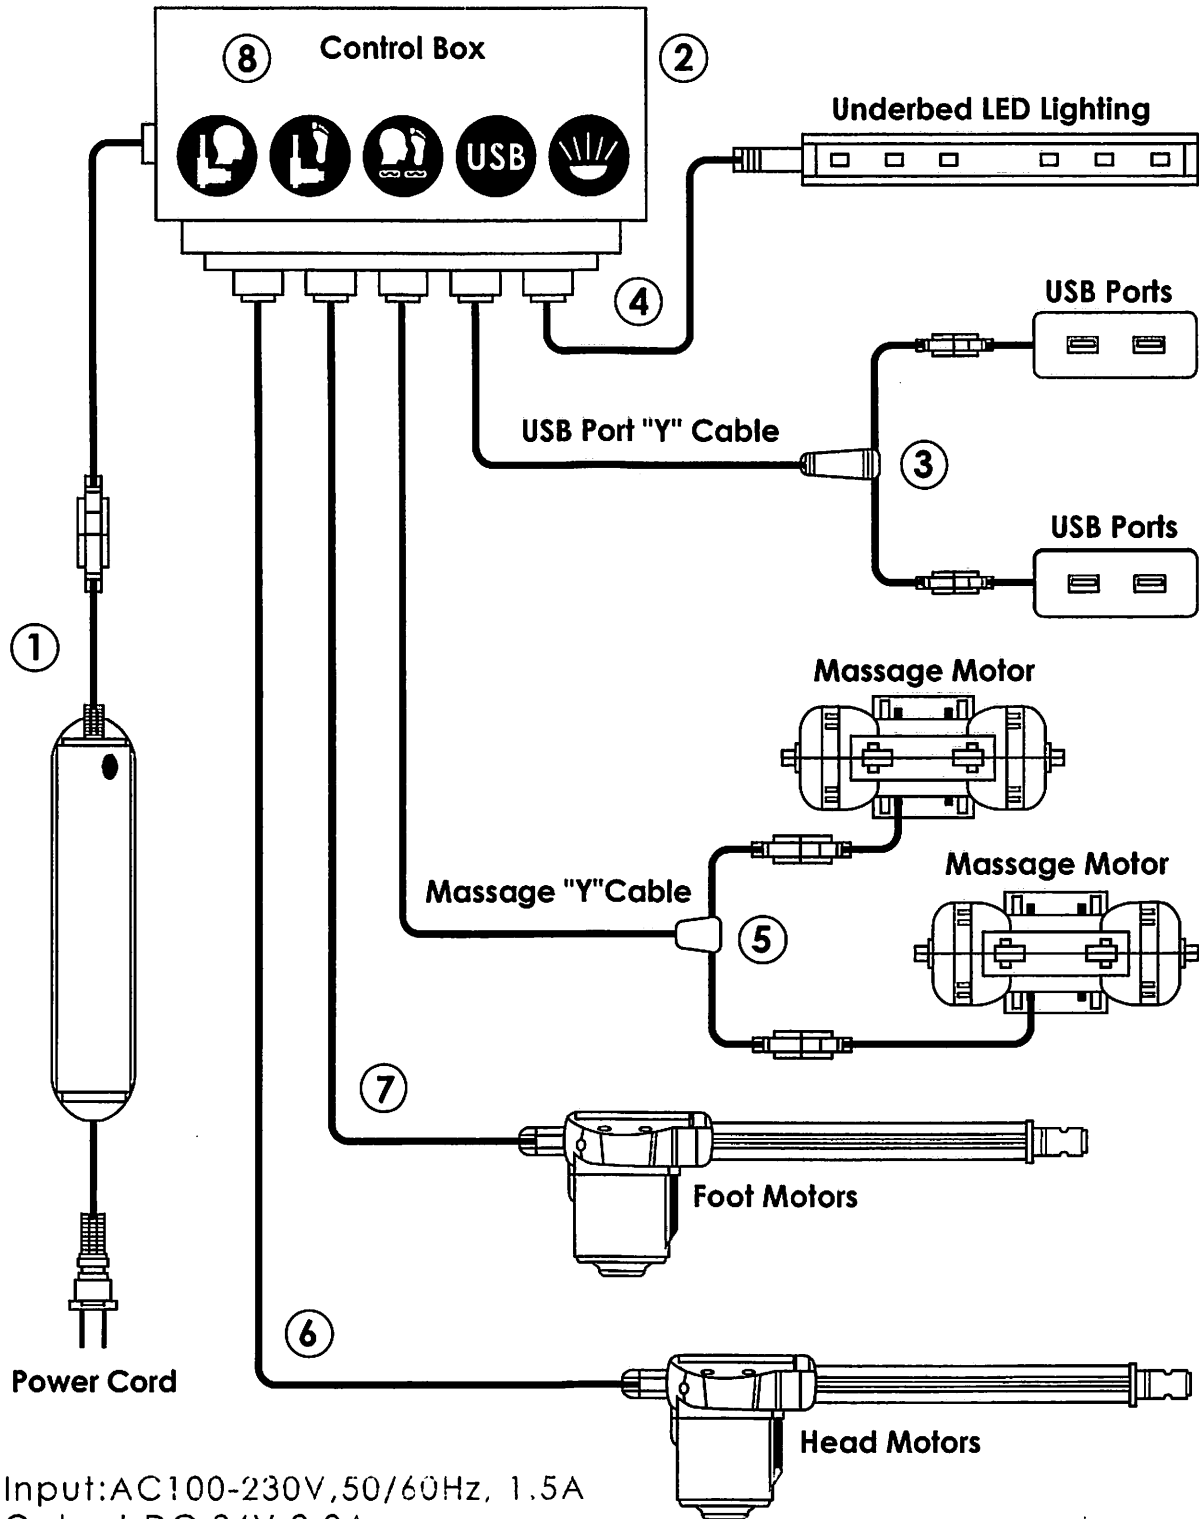




3

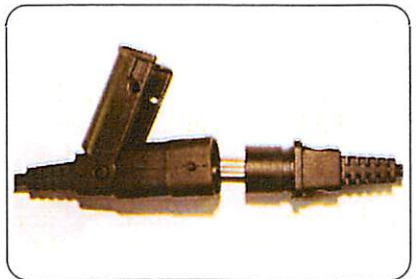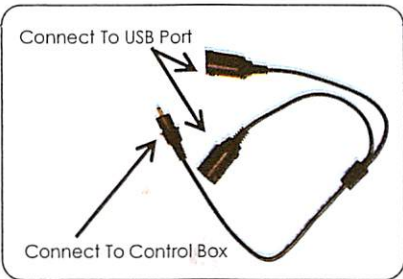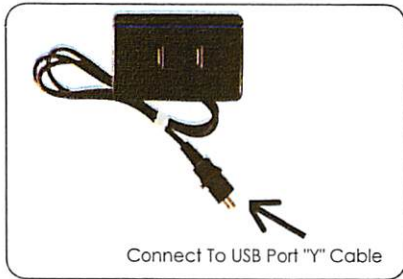

4

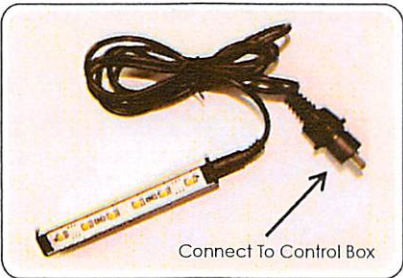

5

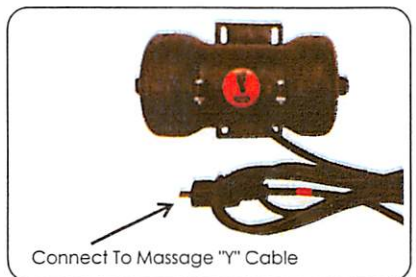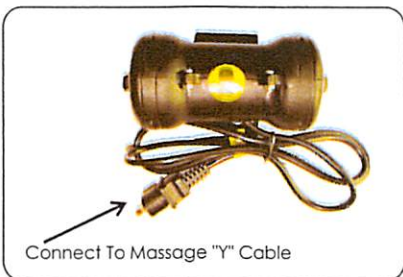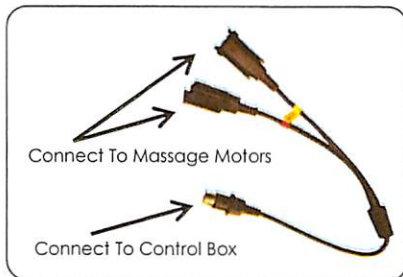


6



7



8

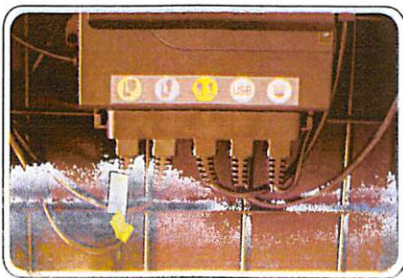

THE UNIVERSITY OF CHICAGO PRESS
CHICAGO, ILLINOIS 60607-7090
TEL: 773/936-3700 FAX: 773/936-3701
WWW.CHICAGO.PRESS.EDU

10. Memory Position 1 (M1) is a function for you to program your desired position. Press the Head/Foot Up and Down buttons to set your desired position. Once you have set your desired position, press and hold the M1 button until the remote backlight flashes for approximately 2 seconds. Your M1 desired position is now set.

11. Memory Position 2 (M2) to program a second desired position. Follow the instructions for M1.

12. Press 12 once to preset Flat Position. (Head and Foot 0 degree)

13. Press 13 once to turn on Head Massage at low intensity, press 13 the second time for medium intensity, third time for high intensity and fourth time to turn off.

14. Press 14 to turn On/Off the Underbed LED lighting. The LED light will turn off automatically after 5 minutes of use.

15. Press 15 once to turn on Foot Massage at low intensity, press 15 the second time for medium intensity, third time for high intensity and fourth time to turn off.

16. Button 16 has two functions: to turn the Head and Foot Massage Off together or to set your massage timer. 10 minutes / 20 minutes Bar : When Button 16 (Timer) is pressed, this bar will light up. Green light represents timer setting for massage duration time. The default time is 10 minutes.

17. Press 17 for Flashlight function at the top of the remote.


18. Button 18 has two functions: to turn on the Head and Foot Massage together or for setting different massage mode options.

How to Sync Two Twin XL Bases into a King

1. Press the Head Down and the Foot Up buttons at the same time using remote control A, and then press the pairing button at side of the control box A from bed A.
2. Then use the same remote control A to pair with control box B from bed B. Press the Head Down and the Foot Up buttons at the same time using remote control A but press the pairing button at the side of the control box B from bed B. A beep sound means pairing is completed.



7. If your remote control does not work then you must pair it with the control box yourself. First, insert 2 AAA batteries (included) into your wireless remote control. Then, pair your Wireless Remote Control with the Control Box by pressing the Head Down and the Foot Up buttons at the same time, and then press the pairing button at side of the control box. You should hear a "beep" sound from the control box as the pairing is completed.

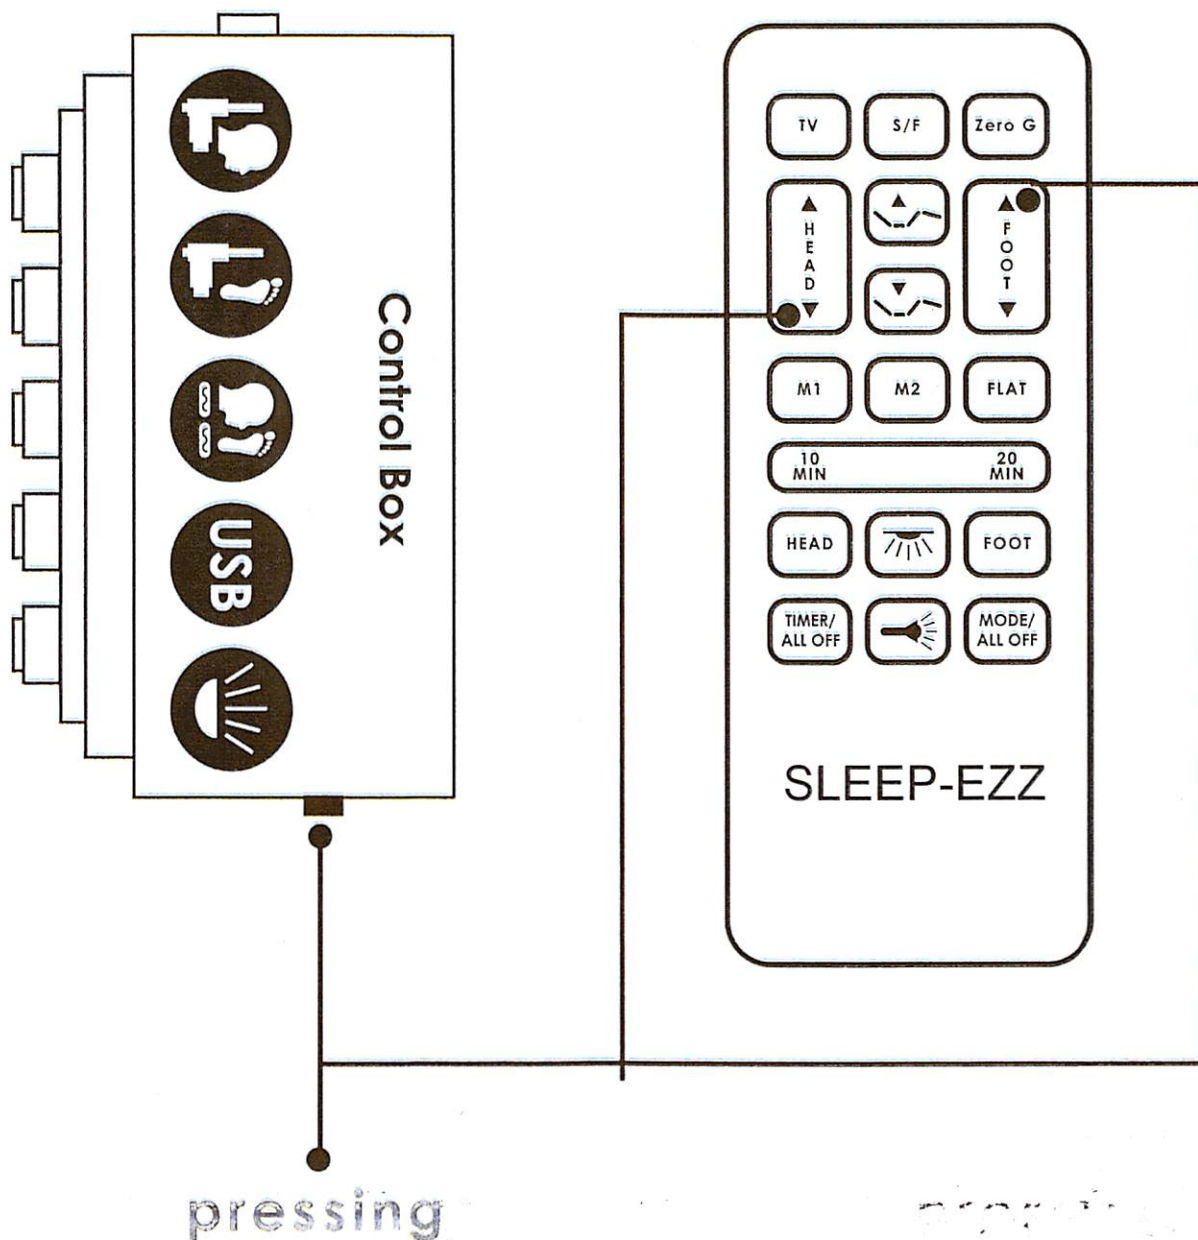

1. Warranties are non-transferable and only given to the original retail purchaser of the Sleep-Ezz. Adjustable bed.

2. Your Sleep-Ezz. Adjustable bed is warranted against any defects of (1) All parts of the SE-450 Adjustable Bed for a period of 1 (One) year; (2) The Lift Motors (not including massage motors, electrical box, remote and electrical components) for a period of 3 (Three) years; and (3) The metal frame for a period of 5 years from the warranty commencement date (purchasing date). Sleep-Ezz. will send replacement parts for any defective part to the purchaser at no cost upon notice during the first year from the warranty commencement date. If the purchaser does not return the defective part to Sleep-Ezz. within **20 days** of receiving the replacement part, the prescribed warranty shall not apply and purchaser shall bear all service, labor, transportation and shipping costs related to the delivery and replacement of the defective part.

3. Warranty shall not apply if (1) the damage is caused by the purchaser, (2) there has been any repair or replacement done by an unauthorized person, (3) the adjustable base has been mishandled through physical or electrical abuse or misuse, or operated in an improper manner that is inconsistent with the instructions outlined in the SE-450 Instruction Manual, (4) there is damage done to the mattress, fabric, cables, or electricals, or (5) there is any costs for unnecessary service calls.